



**OUTBACK  
MOTORCYCLES**

## Yamaha Tenere 700

### QUICK ASSEMBLY GUIDE | SKID PLATE

FOR FULL INSTALLATION INSTRUCTIONS, PLEASE WATCH [THIS VIDEO](#).


#### **Tools Required**

- 10mm Wrench/Spanner
- Ratchet
- 4mm Allen Socket
- Blue Loctite (recommended)

Number	QTY	Specifications	Torque (NM)
<u>1</u>	1	M6 x 25mm Tapered Allen Bolt	10
<u>2</u>	7	M6 x 20mm Tapered Allen Bolt	10
<u>3</u>	4	M6 Washer	-
<u>4</u>	4	M6 Nyloc Nut	-

\* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.\*

**STEP 1:**

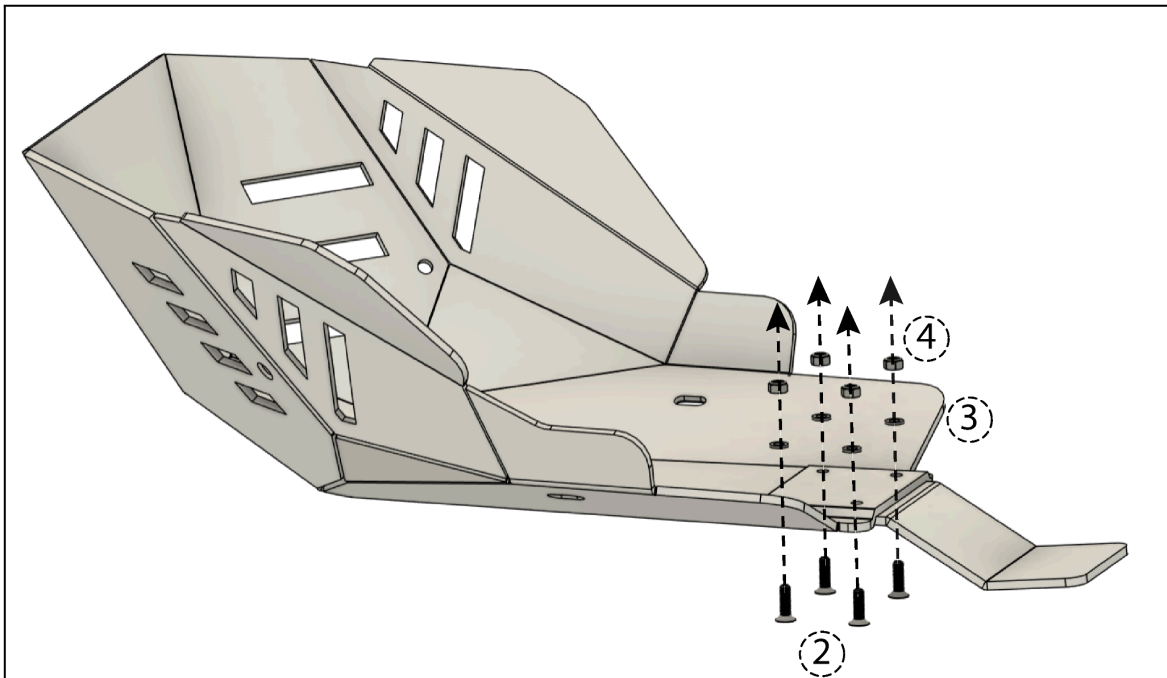

**STEP 2:**

